


DIFFUSE High Mounting

Tongue-and-groove

NOTES:

1. TONGUE AND GROOVE ASSEMBLY REQUIRES 3/8" INSERTION MARGIN.
2. INSTALL USING FASTENER APPROPRIATE FOR SUBSTRATE.
3. INSTALL ONTO FURRING STRIPS SPACED EVERY 12".

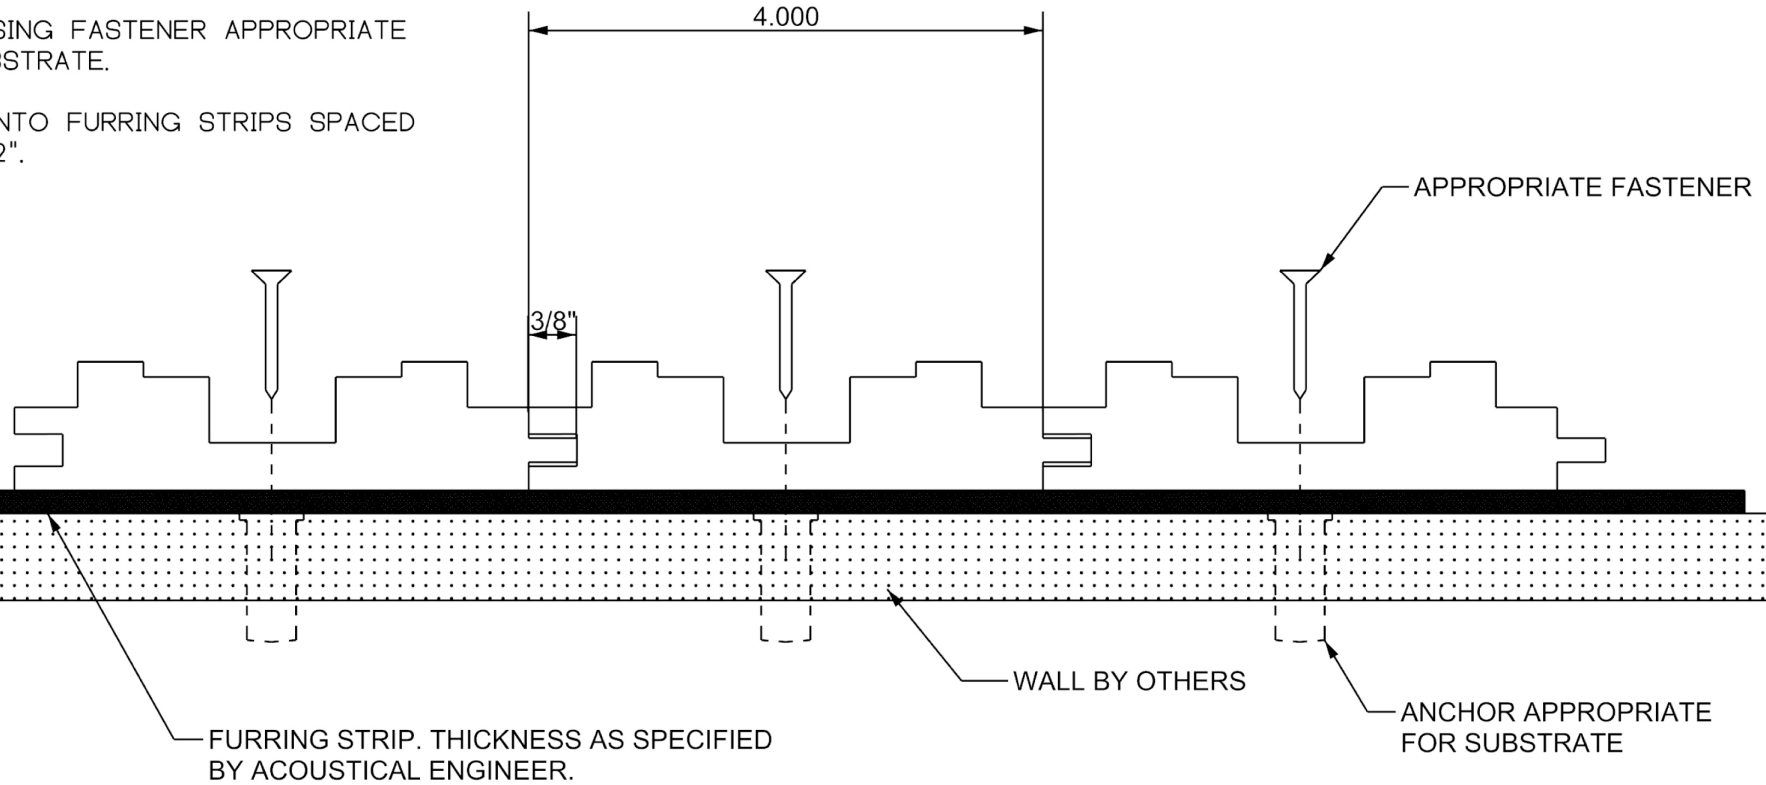

DIMENSIONS ARE IN INCHES
UNLESS OTHERWISE SPECIFIED
TOLERANCES:
XX = ± .010, XXX = ± .005
FRACTIONAL = ± 1/64
ANGULAR = 1°

THIS DOCUMENT AND THE PROPERTY CONTAINED HEREIN IS THE PROPERTY OF ARITHMETIC DESIGN. ANY REPRODUCTION, DISCLOSURE OR USE THEREOF, IS PROHIBITED, EXCEPT AS AUTHORIZED, IN WRITING, BY ARITHMETIC DESIGN, INC. THE RECIPIENT ACCEPTS THE RESPONSIBILITY FOR MAINTAINING THE CONFIDENTIALITY OF THE CONTENTS OF THIS DOCUMENT.

MATERIAL:
FINISH:
DO NOT SCALE DRAWING

	NAME	DATE
DRAWN		
CHECKED		
ENG. APPR.		
MFG. APPR.		

ARITHMETIC

P.O. BOX 11074
DENVER, CO 80211 TEL: 720-255-1604

PART NO.
DIFFUSE HIGH TONGUE/GROOVE

TITLE:
INSTALLATION TEMPLATE

REV. A

SCALE: 1/8" = 1'-0" SHEET 1 OF 1