




## DIFFUSE Glass Installation Procedure


**1. Install ceiling mounting support:** Fasten mounting set support to the ceiling using a #10 or 3/16" anchor that is appropriate for the ceiling substrate. *NOTE: Hooks are available for ceiling grid mounting.*

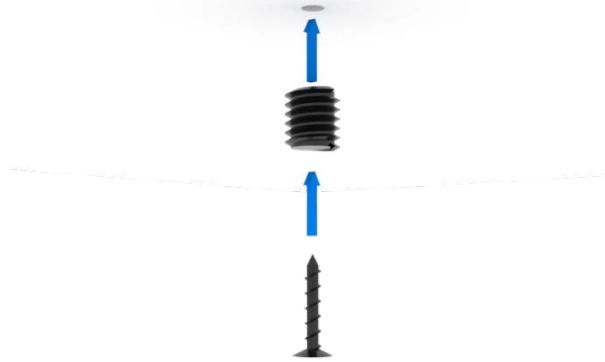

**2. Attach ceiling hardware:** Place a small amount of thread locking compound (included) to the internal threads of the ceiling hardware. This will lock the hardware in place once it has set. Attach the ceiling hardware to the mounting support by screwing the hardware clockwise until it touches the ceiling substrate.




**3. Locate and mount floor hardware base:** Using a laser or plumb bob, locate the position for the floor hardware. Fasten the base of the floor hardware using a #10 or 3/16" anchor appropriate for the floor substrate.

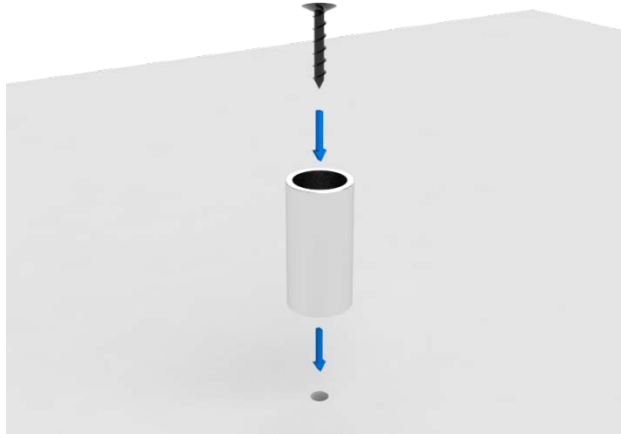


**4. Attach floor hardware body:** Loosen the coupling screw (center) so that there is a gap between all floor hardware components. This is important to ensure correct tightening of the cable later. Screw floor hardware body into the base.



**5. Attach cable to ceiling hardware:** Insert cable into ceiling hardware. Tighten set screws to clamp cable into the hardware.

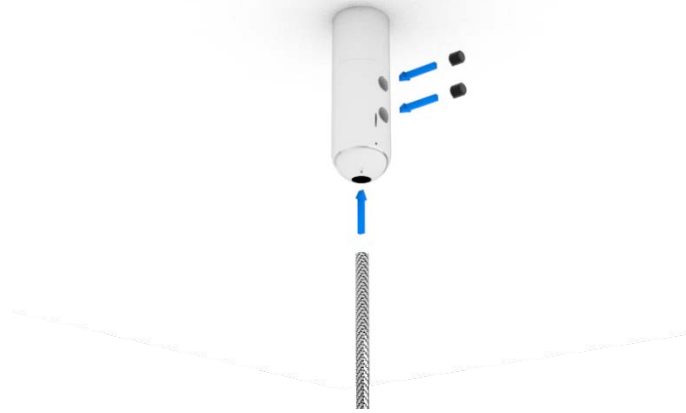

**6. Attach cable to floor hardware:** Insert cable into floor hardware. Cut any excess cable material. Tighten set screws to secure cable into hardware.

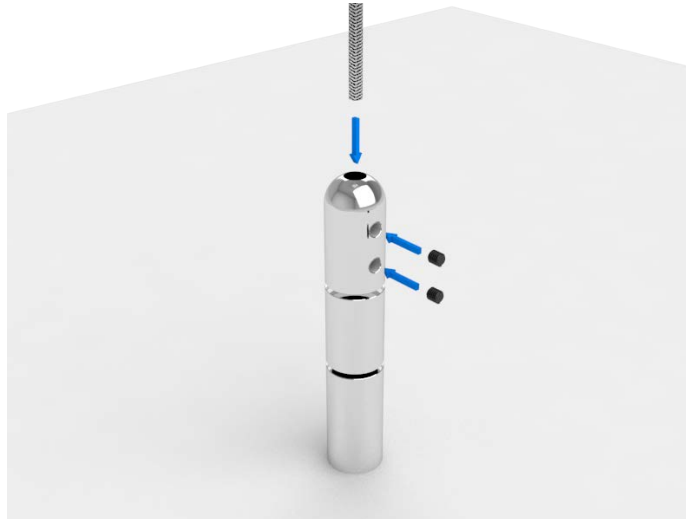

**7. Tighten cable assembly:** Rotate the center section of the hardware clockwise to tighten and tension cable. If cable still has slack, cut from the length of the cable and repeat. Once the final length of cable is determined, loosen the center section and apply thread locking compound to all threaded surfaces.



**8. Mount DIFFUSE Glass to cable assembly:** Slide the cables on each side of DIFFUSE Glass into the slots on the rear of the panel hardware. Attach DIFFUSE Glass by tightening set screws into the rear of the panel hardware. You're finished!

